



RM5 Programming

Your coin acceptor is in has 6 DIP SWITCHES – each responsible for each channel/type of coin.
Originally all switches are in OFF position.

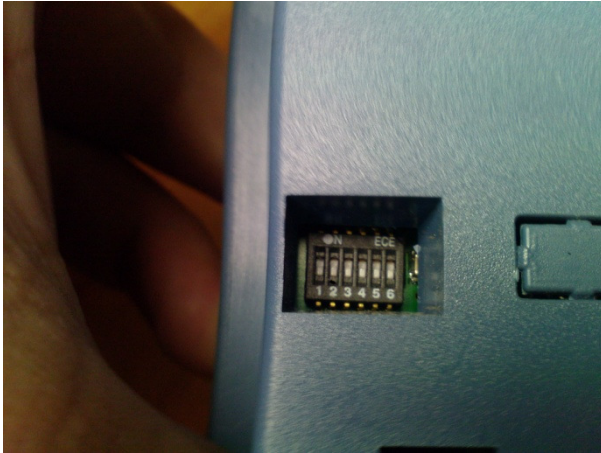

Put all the switches in ON position and energize (plug in) the coin acceptor (make sure the machine is turned on)

Insert 2 coins of the type you want to program.

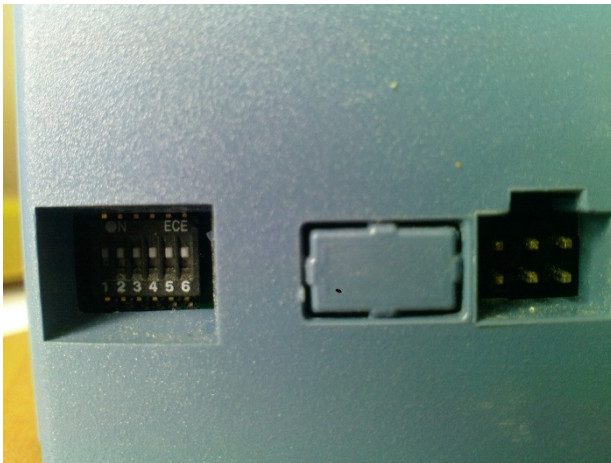

Leave only the channel/switch you want to program (1-6).

Insert 12-15 coins of the type you are programming until you hear a click inside the RM5.

Put all the switches back into OFF position and unplug the unit.

It is ready for use.

