

SOFTWARE AND AUDIO UPDATE INSTRUCTIONS
FOR BOXER, FINAL COUNTDOWN AND PENALTY GAMES BY PUNCH LINE.

Sound update only:

1. Ensure amusement game is in TURNED OFF.
 2. Insert provided SD Memory card into SD Slot on CPU board.
 3. Turn on the machine and allow 10-20 seconds for boot-up.
 4. Display will spell out with red LEDs “MMC CPY”
 5. Press and hold “MAN’ and “WOMAN” buttons for a few seconds
 6. Display will initiate a countdown “001”, “002”, “003” and so on.
 7. The process will take several minutes, after which machine will restart with new sounds.
 8. TURN OFF the machine, remove the SD Memory card.
-

Software Update only:

1. Ensure amusement game is in POWERED OFF.
2. Insert provided SD Memory card into SD Slot on CPU board.
3. Press and continue to hold “SETUP” button on CPU board.
4. Turn on the game and continue to hold “SETUP” button.
5. A diode will start flashing rapidly just above “SETUP” button for a few seconds.
6. Flashing will slow down in a few seconds, which indicates end of update process.
7. Power down the game, remove SD memory card. Restart the machine.
8. Updated software version is displayed during machine boot up (e.g. 2.11)

We welcome your call toll-free at 1-866-786-2410 for any technical support questions you may have.